

RIMS

Bobcat genuine rims are tested and validated to ensure proper fit on the machine and guarantee trouble-free service



RIMS

Bobcat genuine rims are tested and validated to ensure proper fit on the machine and guarantee trouble-free service without cracking, tire mounting issues or slippage under heavy use.



LOADERS RIMS SIZE GUIDE

Tires are designed to work best with corresponding internal rim width. Pairing the tire with the correct rim will ensure achieving the best loading capacity, traction, machine stability, tire life, protection and other parameters.

FOLLOW THIS SIMPLE GUIDE TO QUICKLY IDENTIFY THE RIM SIZE TO FIT THE MOST COMMON BOBCAT SKID STEER LOADERS TIRE SIZES.

TIRE SIZE	RIM DIAMETER	RECOMMENDED RIM SIZE (DIAMETER x WIDTH)
5.7 x 12	12	12 x 5
8.5 x 12		12 x 7
8.5 x 15	15	15 x 7
15.5 x 15 Super Float		15 x 13
10 x 16.5	16.5	16.5 x 8.25
12 x 16.5		16.5 x 9.75
13 x 16.5 Super Float		16.5 x 9.75
15 x 16.5 Super Float		16.5 x 12
14 x 17.5	17.5	17.5 x 10.5